

# CaddyTrek®

## HANDSET COMMANDS

Note: All codes must be done from (SB) mode. The CaddyTrek powers up in (SB) mode and returns to (SB) mode upon exiting any other mode.

### 1. Mute the handset:

- a. Press the DOWN arrow (7) times then press STOP
- b. Repeat steps to disengage

### 2. Free the wheels while unit is on:

- a. Press and hold the UP arrow until unit beeps.
- b. To disengage, press STOP

### 3. Check the handset battery charge level:

- a. Turn on the handset
- b. Press and hold the STOP button for 2-3 seconds
- c. Read LED light indicators left to right
  - i. 4 green lights = 100% charged
  - ii. 3 green lights = 70% charged
  - iii. 2 green lights = 40% charged
  - iv. 1 green light = 10% charged



### 4. Recalibrate handset:

If the unit veers to the left or to the right, you may need to recalibrate.

- a. Turn unit on.
- b. While in SB mode, press: LEFT, RIGHT, LEFT, RIGHT, and then STOP. You'll hear two beeps.

### 5. Change R/F (Radio Frequency) signal:

- Yellow: Left, Left, Left, Stop (you'll hear one beep)
- Pink: Down, Down, Down, Stop (you'll hear two beeps)
- Gray: Right, Right, Right, Stop (you'll hear three beeps)

### 6. Enabling O/A (obstacle avoidance) mode::

- a. Turn OA on: Press and hold the DOWN directional button until you hear 2 beeps
- b. Turn OA off: Press and hold the DOWN directional button until you hear 4 beeps

Notes: Unit is shipped with O/A off; The OA and RC light will light up when OA is in use.