

# Motor Wheel Replacement



# Setup - Tools

Phillips head screwdriver




# Step 1 - Removal





Unscrew the six screws on the motor.

## Step 2 - Removal

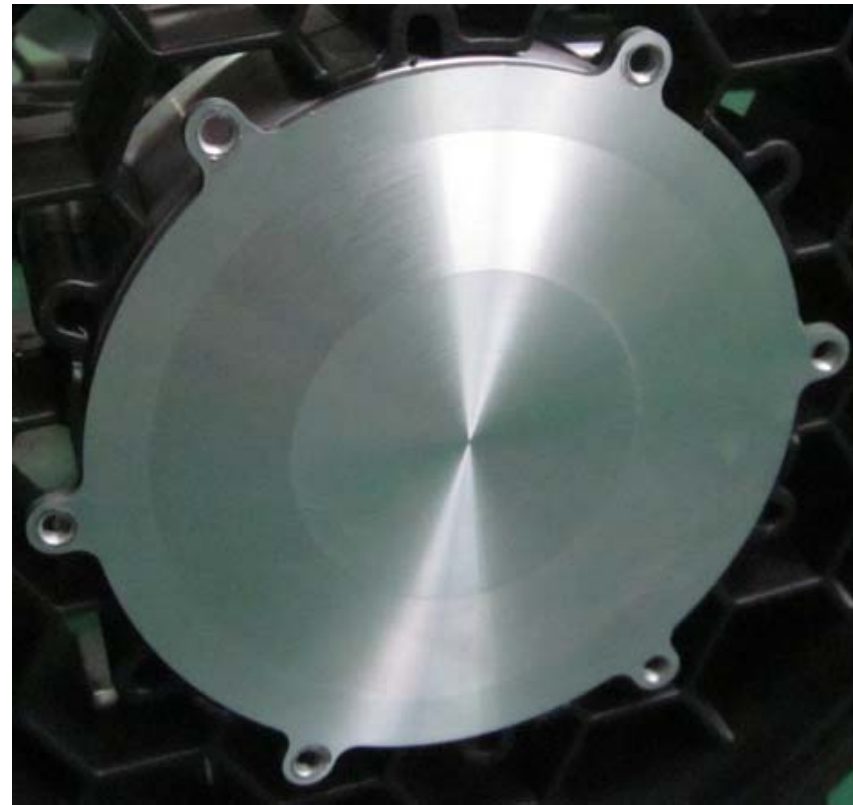


Rotate the motor cover counter-clockwise.

## Step 3 - Removal

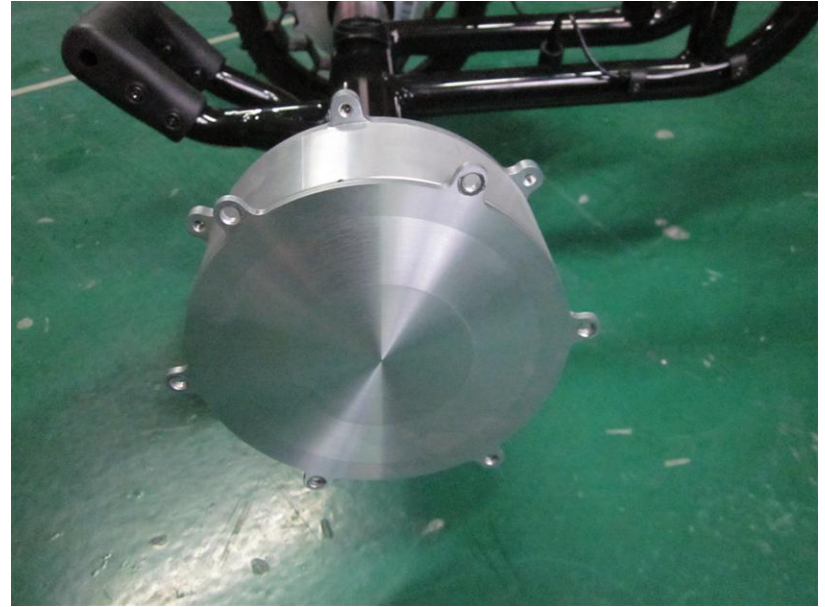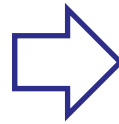

Pull the wheel off of the motor.

# Step 4 - Installation

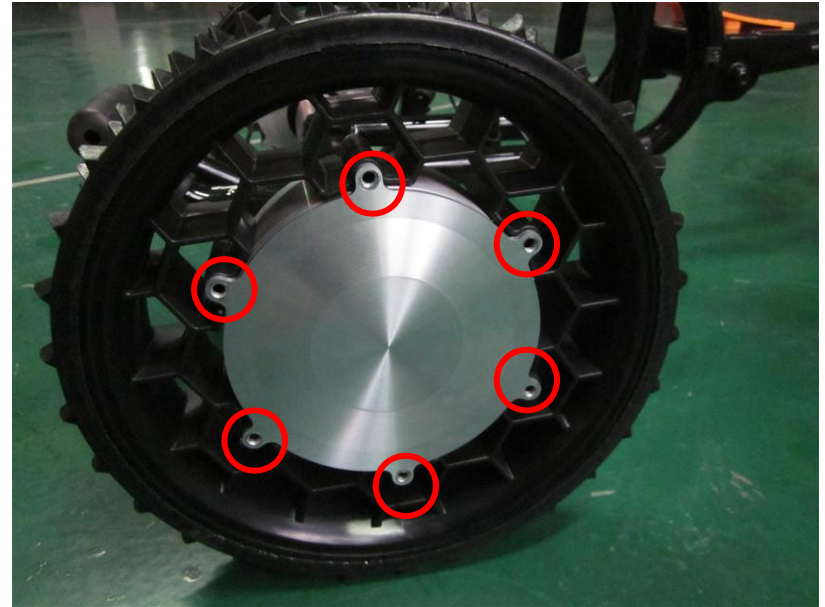

Slide on the replacement wheel and rotate the motor cover clockwise so that the position of the 6 motor screw holes are aligned with the holes on the wheel.

# Step 5 - Installation



Insert and tighten the 6 screws.