


## CHARGING THE MAIN BATTERY

The CaddyTrek uses a Lithium battery to power the motors and sensors and should be fully charged before using your CaddyTrek.

The following instructions will show you how to correctly charge the main battery using the provided battery charger and explain what the indicator lights mean.

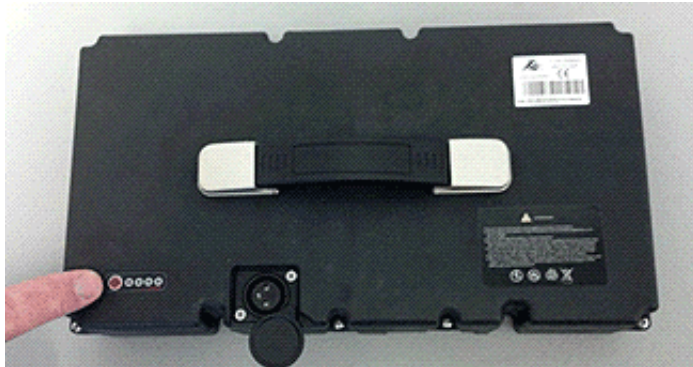

### Checking battery level

To check the battery level, press the **RED** button on top of the battery (see photo).

### Green light indicators

Three green lights: The battery is fully charged.

Two green lights: The battery is 50-75% charged (recommend charging before use)

One green light: The battery is less than 50% charged (must be charged before use)

### Using the battery charger

1. Remove the CaddyTrek battery from the CaddyTrek unit.
2. Plug the battery charger into the main battery's charging port.
3. Plug the other end of battery charger into a power outlet.
4. The indicator light should turn **RED** to indicate battery is charging.
5. If the charge indicator light does NOT change turn **RED**:
  - a. Leave the charger plugged into the battery.
  - b. Un-plug the charger from the power outlet, wait 5 seconds then plug it back in.
  - c. Within 3 seconds the indicator light should now turn **RED**.
6. Let the battery charge between 6 - 8 hours. **Never** charge and leave unattended overnight.
7. Check the battery charge level again (refer to checking battery level above).
8. If the indicator light is **GREEN**, the battery is charged.
  - a. Unplug the charger from the battery.
  - b. Carefully re-insert the battery back into the CaddyTrek unit and begin use.
9. If the indicator light is not **GREEN**, charge for an additional 1-2 hours.

**PLEASE NOTE:** Do not attempt to open or disassemble battery. WARRANTY will be voided.

## **Handset battery and charger**

The handset battery is a Lithium Ion 4.2V battery which will remain charged for up to 30 hours.

The handset battery takes 2 hours to fully charge. The handset comes with a charger as well which can be plugged into any residential electrical outlet.

### **WARNINGS**

- Do store battery in a cool, dry place away from direct sunlight and excessive heat or cold
- Do charge or Store in temperatures ranging from 10°C to 30°C
- Do charge in a well-ventilated area
- Do not leave charger connected to battery overnight
- Do not disassemble the battery or throw it into a fire
- Do not touch the electric poles of the battery
- Do not attempt to open the battery, risk of electric shock or fire
- Do not keep battery connected to the grid during prolonged power outages
- Do not short circuit battery and keep away from paper clips, coins, keys, and other small, metal objects
- Do not splash or immerse battery in liquids
- Do not charge battery in a sealed container or upside down, do not charge battery near heater, or where heat accumulates, or in direct sunshine
- do not store or charge battery in temperatures below -10°C or above 40°C
- do not use non-CaddyTrek branded charger to charge battery as it may cause battery damage or cause fire
- do not use battery if damaged
- if battery is leaking any liquids, do not touch it as it may cause irritation or burns
- if not in use, store battery in a cool, dry place away from direct sunlight and excessive heat or cold; be sure to charge at least every three months
- if disposing of battery, take it to a proper recycling center