

CaddyTrek®

HANDSET COMMANDS

Note: All codes must be done from (SB) mode. The CaddyTrek powers up in (SB) mode and returns to (SB) mode upon exiting any other mode.

1. Mute the handset:

- Press the DOWN arrow four (4) times then press STOP
- Repeat steps to disengage

2. Free the wheels while unit is on:

- Press and hold the UP arrow until unit beeps.
- To disengage, press STOP

3. Check the handset battery charge level:

- Turn on the handset
- Press and hold the STOP button for 2-3 seconds
- Read LED light indicators left to right
 - 4 green lights = 100% charged
 - 3 green lights = 70% charged
 - 2 green lights = 40% charged
 - 1 green light = 10% charged



4. Recalibrate handset:

If the unit veers to the left or to the right, you may need to recalibrate.

- Turn unit on.
- While in SB mode, press: LEFT, RIGHT, LEFT, RIGHT, and then STOP. You'll hear two beeps.

5. Change R/F (Radio Frequency) signal:

- Yellow: Left, Left, Left, Stop (you'll hear one beep)
- Pink: Down, Down, Down, Stop (you'll hear two beeps)
- Gray: Right, Right, Right, Stop (you'll hear three beeps)

4. Audio for Follow and Marching Mode:

- Turn on Audio
 - In (SB) mode, hold down the RIGHT directional button until you hear 2 beeps
 - Stand with your back to the unit and hold down the Follow button (you'll hear 2 beeps for Follow mode and 3 beeps for Marching mode).
- Turn off Audio
 - In (SB) mode, hold down the RIGHT directional button until you hear 4 beeps