

Tools Needed:

- 17 mm socket and ratchet
- 17 mm wrench



Step 2: Using the tool above, remove the nut as shown below.



Step 4: Insert and install the new caster wheel assembly.



The End: Congratulations, you have successfully replaced the caster wheel assembly.

Step 1: Unscrew the nut circled in red below.



Step 3: Remove the caster wheel assembly while sliding the bar out, making sure you keep the bearing assembly intact.



Step 5: Tighten the nut making sure the caster wheel bar swings back and forth easily. Do not over tighten!

