

Tools Needed:

- Phillips screwdriver
- 7 mm wrench or socket



Step 1: Unscrew the 6 screws on the motor wheel.



Step 2: Rotate the wheel counter-clockwise.



Step 3: Pull the wheel off of the motor.



Step 4: Slide on the replacement wheel.



Step 5: Rotate wheel clockwise and align the 6 screw holes with the holes on the wheel.



Step 6: Insert and tighten the 6 screws



Note: If you have a newer wheel, you'll need to remove the nut and the outer ring. See image.

