

Handset Commands

All modes must be done from Standby (SB) mode. The unit powers up in (SB) mode & returns to (SB) mode upon exiting any other mode.

1. Mute the handset:

- a. Press the DOWN arrow (4) times then press STOP.
- b. Repeat steps to unmute.

2. Mute the cart:

- a. Press UP, DOWN, UP, DOWN, STOP.
- b. Repeat steps to unmute.

3. Check the handset battery charge level:

- a. Turn on the handset.
- b. Press and hold the STOP button for 2-3 seconds.
- c. Read LED light indicators left to right.
 - i. 4 green lights = 100% charged
 - ii. 3 green lights = 70% charged
 - iii. 2 green lights = 40% charged
 - iv. 1 green light = 10% charged

4. Using the Directional Buttons

- Press the Forward, Reverse, Left or Right directional buttons to move CaddyTrek in the desired direction.
- To accelerate CaddyTrek to its maximum speed, hold down the Forward button or press repeatedly.
- To slow CaddyTrek down to a stop while moving forward, repeatedly press the Reverse or Stop button. Once stopped, pressing once more will reverse the unit.
- To go back into Standby (SB) mode, press STOP, STOP.

Scan QR code below to watch video.



<https://youtu.be/8ORGFC4U44k>