

Charging and Removing Battery

The CaddyTrek uses a Lithium-Ion battery to power the cart and should be fully charged before use, about 6 hours. You can either remove the battery from the cart to charge, or you can leave it in the cart to charge.

The main battery and handset battery can be charged using any household 110-volt outlet.

Charging the Battery

1. Plug the battery charger into the main battery's charging port located under zipped pocket).
2. Plug the other end of battery charger into a power outlet and charge for about six (6) hours.
3. Once fully charged, unplug the charger.



Checking battery level

To check the battery level, press the **RED** button on top left of the battery (see photo).



Green light indicators

- 3-green lights: The battery is fully charged.
- 2-green lights: The battery is 50-75% charged.
- 1-green light: The battery is less than 50% charged.

Note: Low battery voltage indicated by four loud beeps from CaddyTrek.

Removing the Battery

The main battery is located under the zipped pocket of jacket.

To remove the battery, unzip the pocket (on jacket) and lift up on battery handle.

Scan QR code below to watch video.



<https://youtu.be/-Eh5hiv98RU>