

## Using Follow (FL) Mode

### Using Follow (FL) Mode

You can activate follow (FL) mode in two ways:

- Using Handset
- Using palm gesture

#### 1. Follow (FL) Mode Using Handset

- a. To activate FL mode, hold down the FOLLOW button, listen for the single beep, then start walking.
- b. To deactivate, hit the STOP button or the FOLLOW button, listen for the double beep.



<https://youtube.com/shorts/Shm-BdA6Ex8?feature=share>

#### 2. Activating and Deactivating Follow Using Palm Gesture

- a. To activate FL mode using palm gesture, hold hand out about 8-10 in. from camera (palm side facing camera) & listen for the single beep.
- b. After you hear the single beep, turn around and start walking slowly. Within 15 paces, the cart will pick up speed to keep up with you.
- c. To deactivate follow mode, STOP walking, let the cart come up & stop behind you, then take one step back into the cart and listen for the double beep. You are now free to walk away.



<https://youtu.be/tWhwjzcx-5E?si=v-5dcEkkFhCQVI-7>



### TIPS

- When walking away from the cart, you want to let the cart slowly pick up its speed. DO NOT walk away from the cart at a fast pace.
- When deactivating follow mode, SLOW down BEFORE stopping.
- When activating camera, if it doesn't work on the first attempt, pull hand away, wait 2 seconds, then try again.
- Always use UNGLOVED hand.