

Using Manual (Push) Mode

Manual Push (Free Wheel) Mode

1. Activating Free Wheel Mode Manually

- a. From Standby (SB) mode, tilt the cart down using the handlebar until the anti-tipping wheel is touching ground.
- b. A single beep will indicate push mode.
- c. To disengage, pause for a second and repeat 1st step, listen for the double beep. You are now back in SB mode.

Scan QR code to watch video.



<https://youtube.com/shorts/K7JVogAtVAw?feature=share>

2. Activating Push Mode Using Handset

- a. From Standby (SB) mode, hold down the forward directional button, listen for the single beep.
- b. Wheels will unlock and you can move the cart freely now.
- c. To disengage and return to SB mode, hit the STOP button, and listen for the double beep.
- d. You are now back in SB mode.

Scan QR code to watch video.



<https://youtube.com/shorts/K3SDa-uDkA?feature=share>