

CaddyTrek[®]

Using Remote Control (RC) Mode

Remote Control (RC) Mode

1. Power on the handset and then the CaddyTrek.
2. Position yourself behind the large wheels of CaddyTrek with your chest facing the CaddyTrek.
3. Hold down the “Left” directional (RC) button until the handset emits a short beep and RC light will be blinking on the handset. **30-yard max range.**
4. Blue light on CaddyTrek will indicate RC mode is ready along with a single beep from cart.
5. To stop the unit, press the STOP button once. Cart will double beep.
6. RC mode is ready after powering on.

Activating RC Mode:



<https://youtube.com/shorts/v1h0WVr8zG0?feature=share>

RC Mode to Free Wheel Mode



<https://youtube.com/shorts/BaW-xyzaQ9E?feature=share>