

## Charging the Battery and Handset

- Charge the battery for a minimum of 8 hours.
- Charge the handset for a minimum of 2 hours (LED indicator turns green when fully charged).

## Getting Started

**OUTDOOR** use only. Practice first, in a wide-open area, away from any obstacles:

1. Power ON CaddyTrek (switch is on the control box)
2. Position yourself to directly face the large wheels of CaddyTrek, then power on the handset.
3. Point the handset towards CaddyTrek to establish communication. You will hear two short beeps once the communication link is established.

**Note:** CaddyTrek will be in the Standby mode with the SB light flashing.

## Follow Mode (FL)

1. Position yourself in front of the Large wheels of CaddyTrek with your back towards the caddy.
2. Clip the handset to your back Pocket or on a belt as shown.
3. Press the Follow button (you will hear a short beep).
4. Start walking. CaddyTrek will follow at your pace.
5. When you are ready to hit a shot or putt, press the Follow button again or the STOP button to stop the caddy.

**Note:** Caddy will go into Standby mode. You will hear one long and one short beep when CaddyTrek is switched to Standby mode.

## Remote Control Mode (RC)

1. Position yourself behind the large wheels of CaddyTrek with your chest facing the caddy.
2. Hold down the LEFT directional button on the RC (remote control) for three seconds. You will hear a short beep and the RC light will turn on.
3. Press UP (Forward), DOWN (Reverse), LEFT or RIGHT directional buttons to move CaddyTrek.
4. Holding down or repeated pressing of the UP directional button will quickly accelerate CaddyTrek to its maximum forward speed.
5. Press the STOP button to stop the caddy. CaddyTrek will remain in RC mode.
6. Press the STOP button again to get the CaddyTrek out of RC mode and into the Standby mode.

## Using Marching Mode

1. Power on the unit and handset.
2. Stand 4.5ft from the unit and between the sensors.
3. Make sure the handset is facing the unit.
4. Hold down the right directional button.
5. Start walking.
6. To turn the unit while using Marching mode, move one-half step in the opposite direction.
7. Exit Marching mode anytime by pressing the STOP or FOLLOW buttons.

## Manual Push/Pull Mode

1. Make sure the caddy is on level ground.
2. Power off CaddyTrek and handset.
3. Push or pull CaddyTrek with the push bar.



# Quick Start Guide

**Caution: OUTDOOR use only! Practice first in a wide-open area, away from any obstacles and people. Avoid pinch hazards when folding and unfolding**

## Unfolding the CaddyTrek




**1. Place on flat surface.**



**2. Loosen color knobs.**



**3. Place foot under base and raise handles. Wheels will move forward.**

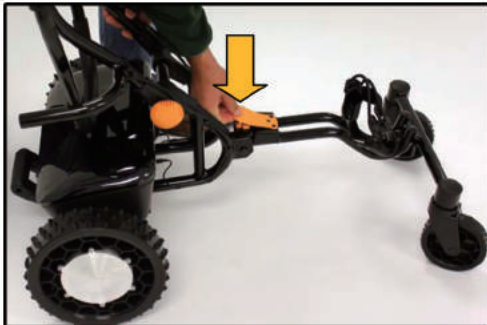

**4. Push frame lock down to lock wheels in place.**



**5. Loosen black knobs to position push-handle. Tighten all knobs.**



**6. Extend 5th wheel (optional for enhancing balance on hills).**



**7. Lift battery cover.**



**8. Insert battery and push down into place.**



**9. Power on the cart and handset to initialize.**



**10. Clip handset to your belt, exposed and let the CaddyTrek follow you.**

For best results, charge battery fully and do not cover the handset with clothing; stand directly behind the CaddyTrek to initialize handset.