

Tools Needed:

- Phillips screwdriver



Step 2: Flip the cart upside down by lifting the front chassis and rolling over backwards.




Step 4: Flip the cart upright and slightly lift the rear side of the e-box.



Step 1: Fold the top handle down, and then fold the lower joints down forward as shown.



Step 3: Unplug the sensor wires first, and then remove the 4 brackets holding the e-box to the frame.

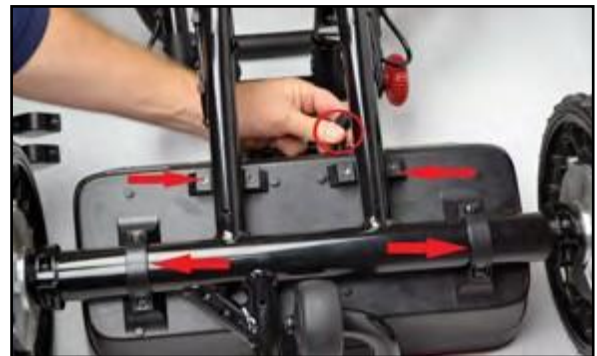

Step 5: Carefully remove the top cover by unhinging (marked by red arrows). Replace top cover with new one.




Step 6: Hold the e-box to the frame and flip upside down ensuring the rubber grommet seats to the frame and e-box properly.



Step 7: Reinstall the (4) brackets to the frame.



Step 8: Plug in and tighten the sensors.

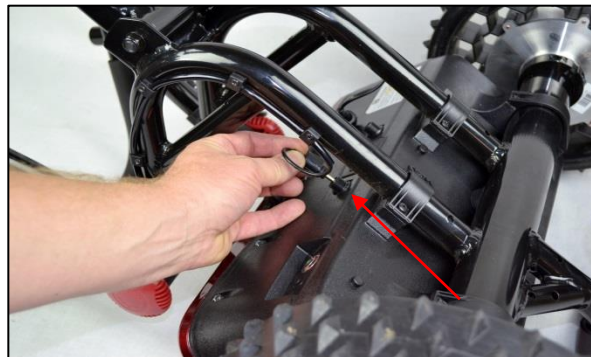

Step 9: Return the cart to the proper position.



The End: Congratulations, you have successfully replaced the top cover!